

Prima LT TA Settings

- Check TA settings: From the algorithm menu Press the right arrow twice then press enter (down arrow) on Interface check settings as per the table below:

The option highlighted in square brackets is the one currently selected. Pressing enter (down arrow) on an option will confirm it as the new setting.

Menu	Setting
INT TA	TA201
Country	UK
LDN1	{EMPTY}
LDN2	{EMPTY}
INTERFACE 1 + 2	ACTIVE
SUB ADDR 1	{EMPTY}
SUB ADDR 2	{EMPTY}
LLC 1	OFF
LLC2	OFF

Then set initialize to yes and save no.